



### Programming

Before installing the data units, configure them using a PC and SDRLink™ or TrangoLink™ software. The protocol should be set to RS-485/422; set both the transmitter and the receiver to data pass-through mode at 9600 baud, even parity. Software downloads are available at [www.trangobroadband.com/infobase/programming\\_software.shtml](http://www.trangobroadband.com/infobase/programming_software.shtml)