



The transmitter will send video and link verification to the receiver for three seconds every thirty seconds. This will confirm the status of the link while minimizing the transmitter standby current consumption.

Before installing the transmitter, you will need to configure the unit for Power-Saver Standby Mode™ using a PC and TrangoLink™ software. The Power-Saver Standby Mode allows the transmitter to return to standby after a certain period of time, user selectable between one and 255 minutes after the last alarm received.

Connect your dry-contact alarm inputs across ALARM 1. The alarm being used will need to be configured for NC.

