



Vicon Controller

Any Vicon controller that issues VPS commands can be used. Connect the COMMAND OUT + and COMMAND OUT - from the output of your controller to the Rx+/Rx- on the SDR900H. For installations using Eagle Plus or Falcon Plus units for data, they must be fitted with the LC485/422 daughterboard, one in each Transmitter and Receiver.

Vicon Dome

Connect the Tx+ and Tx- from the output of the SDR900H to the CIN+ and CIN- leads (Command In) of the receiver or dome driver. For installations using Eagle Plus or Falcon Plus units for data, the cables are connected to the Tx+ and Tx- leads of VRX0000's daughterboard.

Programming

Before installing the data units, configure them using a PC and SDRLink™ or TrangoLink™ software. The data rate needs to match your Vicon equipment. Software downloads are available at www.trangosys.com/support/downloads.htm

For more information on Vicon products, visit www.vicon-cctv.com