



Connections

The Ultrak units are connected to break-out boxes via six-pole telephone cable terminated in RJ-11 plugs. Both are supplied by Ultrak.

Ultrak Receiver

In order to place the DTMRX unit into RS232 mode, JP1 must be set to position C. Consult Ultrak for more information on configurations and other settings.

Ultrak Transmitter

Be sure to use the RJ-45 port, at the extreme right when viewed from the back of the unit.

Contacting Ultrak

For documentation and specifications for Ultrak products, contact them by phone at 800-796-2288 or by Internet at www.ultrak.com.

Programming

Before installing the data units, configure them using a PC and SDRLink™ or TrangoLink™ software. The data rate needs to match that of your Ultrak equipment and must be the same for both transmitter and receiver. Software downloads are available at www.trangosys.com/support/downloads.htm