



### Ultrak JPD series controllers

The associated break-out box, DIA-01, its RJ11 patch cable, and its 5vDC power supply are all available from Ultrak. For additional information, call 800-796-2288 or visit [www.ultrak.com](http://www.ultrak.com).

### Programming

Before installing the data units, configure them using a PC and SDRLink™ or TrangoLink™ software. The protocol should be set to RS-485/422; set both the transmitter and the receiver to data pass-through mode at 9600 baud, even parity. Software downloads are available at [www.trangosys.com/support/downloads.htm](http://www.trangosys.com/support/downloads.htm)