



Verify the fundamental operation of the Pelco NET100 video server by hooking up a camera and connecting the server directly to the computer using a crossover cable. Then, using the procedure described in the TrangoLink-10 user manual, configure the Master Unit (MU) and Remote Unit (RU) so that they associate with each other. Connect the video server to the RU side, and connect the monitoring computer to the MU side.

If either the video server or the personal computer is connected to a network switch, use straight-through cables instead of crossover cables to connect the device to the hub and the hub to the junction box.

You'll need a Pelco RS422 to RS232 converter to operate the Spectra Dome camera.

Visit www.pelco.com or call 800-289-9100 for more information on the Pelco NET100 series.

Power for camera and Pelco NET are separate.

