CONFIGURATION NOTE #11

Axis 2400 Video Server with TrangoLINK-10 Point-to-Point Wireless Ethernet Bridge

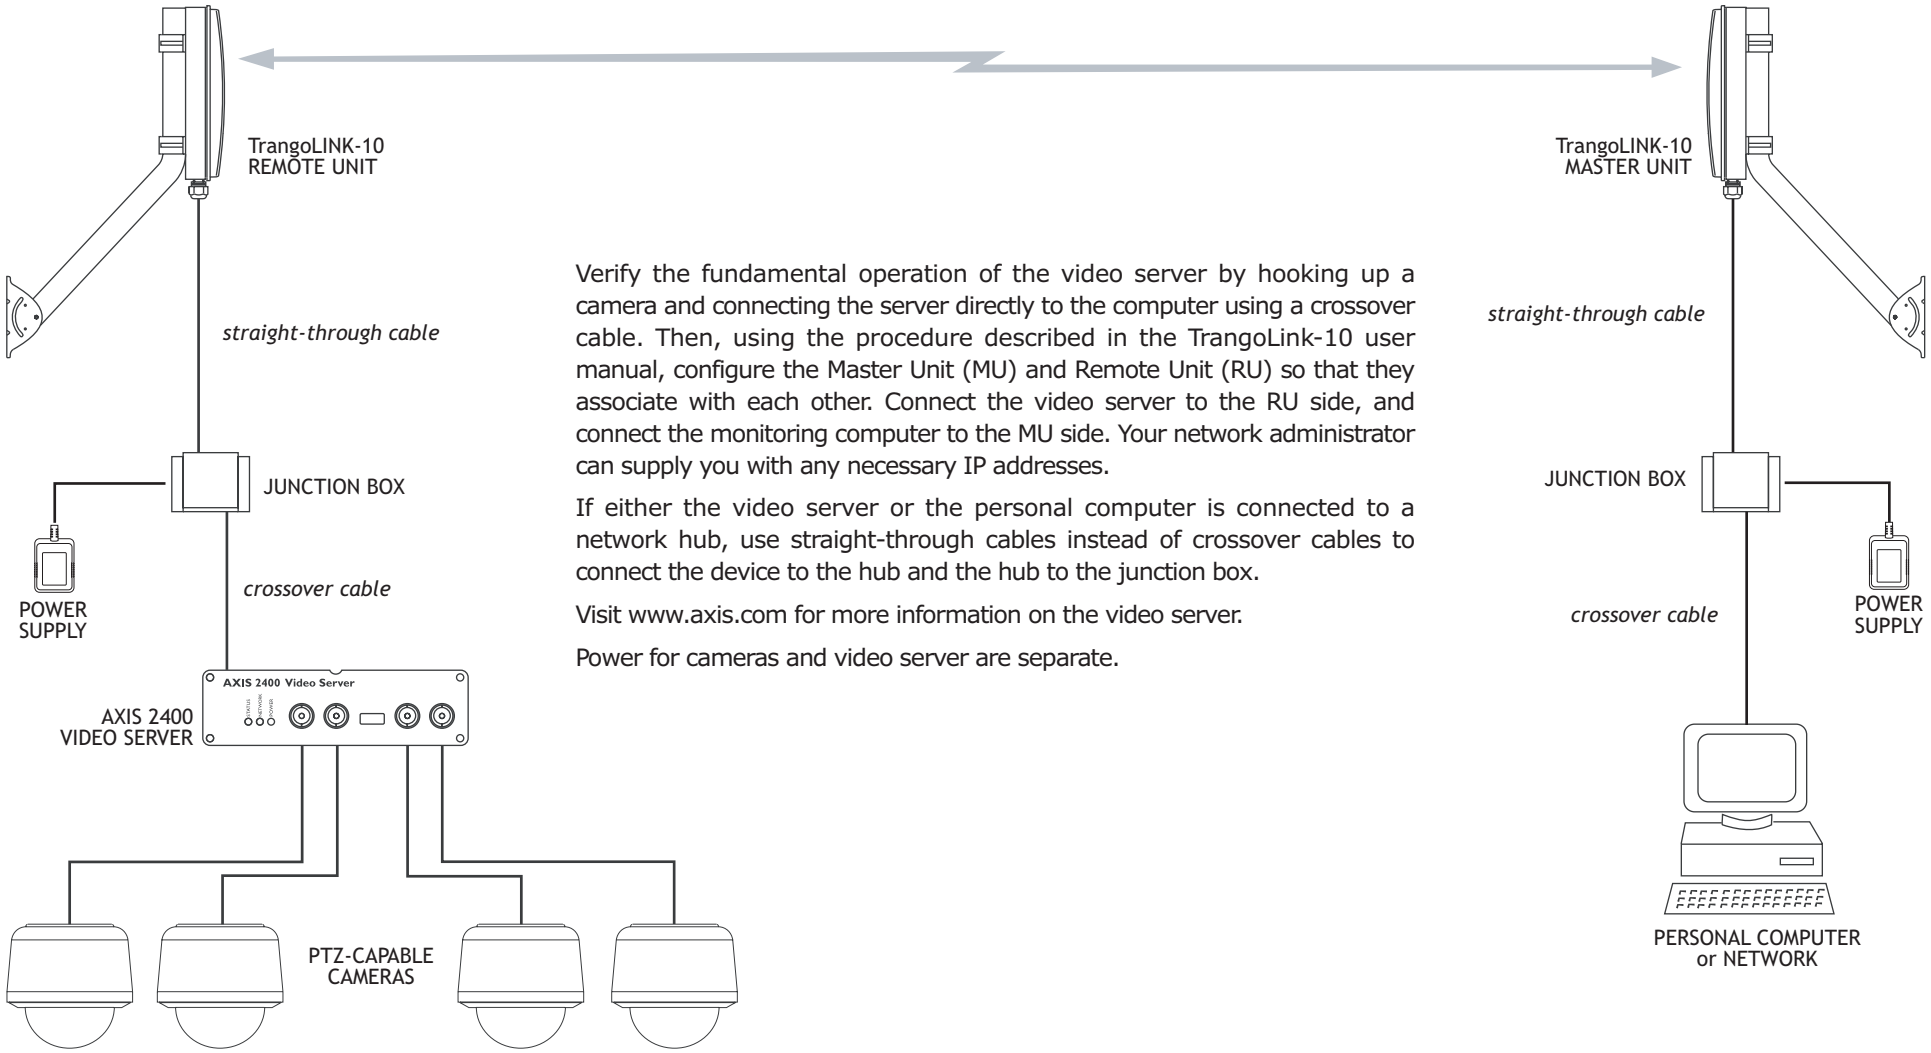

Verify the fundamental operation of the video server by hooking up a camera and connecting the server directly to the computer using a crossover cable. Then, using the procedure described in the TrangoLink-10 user manual, configure the Master Unit (MU) and Remote Unit (RU) so that they associate with each other. Connect the video server to the RU side, and connect the monitoring computer to the MU side. Your network administrator can supply you with any necessary IP addresses.

If either the video server or the personal computer is connected to a network hub, use straight-through cables instead of crossover cables to connect the device to the hub and the hub to the junction box.

Visit www.axis.com for more information on the video server.

Power for cameras and video server are separate.

15070 Avenue of Science, Suite 200, San Diego, CA 92128 • PHONE +1 858-653-3900 • FAX +1 858-621-2725 • http://www.trangosys.com
Copyright ©2004 Trango Systems, Inc. All rights reserved.
REV B • 09-15-04